

Check Pi CPU Temp

To check the CPU temp of the Pi, use the following from the command line:

```
cat /sys/class/thermal/thermal_zone0/temp
```

From:

<https://wiki.alanwalker.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

https://wiki.alanwalker.uk/doku.php?id=check_pi_cpu_temp&rev=1472411839

Last update: **2023/03/09 22:35**

