

# Cisco Configuration

## Cisco 3560 Configuration Guide for iSIS8000 Systems

### Introduction

The following document deals purely with the configuration of 3560 switches used in iSIS8000 systems under nCC V5 control. It covers both TS data and TS output switches.

Cisco switches are becoming more and more common in TANDBERG systems as they are used to interface various products to customer IP networks. The switches can be used in many roles within the system. The following document is designed to assist setting up Cisco equipment for use with nCompass Control and iSIS8000 systems.

This document gives an overview of all the functions associated with Cisco switches when used with nCompass Control. The document is only to be used as a guide to assist engineers in setting up and configuring switches. The following instructions for setting up switches in the following modes are covered:-

1. TS Data switch
2. TS Output switch

From:  
<https://wiki.alanwalker.uk/> - WalkerWiki - [wiki.alanwalker.uk](https://wiki.alanwalker.uk/)

Permanent link:  
[https://wiki.alanwalker.uk/doku.php?id=cisco\\_configuration\\_ttl&rev=1474636896](https://wiki.alanwalker.uk/doku.php?id=cisco_configuration_ttl&rev=1474636896)

Last update: **2023/03/09 22:35**

