

Cisco SFP and Port Commands

Dec 2019

I purchased some SFPs to go in to a Cisco 10GB switch, and found they did not work in my switch. While investigating the fault, I found some useful commands to help me.

These commands seem to work on both Cisco IOS and the Nexus switches, albeit with some slightly different syntax.

Show Inventory

Show Inventory - [sh inventory](#) displays information about the switch hardware options:

```
NAME: "Chassis", DESCR: "Nexus 3548 Chassis"
PID: N3K-C3548P-10G      , VID: V02 , SN: F0C1822R0WS

NAME: "Module 1", DESCR: "48x10GE Supervisor"
PID: N3K-C3548P-10G      , VID: V02 , SN: F0C18220S2A

NAME: "Fan 1", DESCR: "Chassis fan module"
PID: NXA-FAN-30CFM-F     , VID: N/A , SN: N/A

NAME: "Fan 2", DESCR: "Chassis fan module"
PID: NXA-FAN-30CFM-F     , VID: N/A , SN: N/A

NAME: "Fan 3", DESCR: "Chassis fan module"
PID: NXA-FAN-30CFM-F     , VID: N/A , SN: N/A

NAME: "Fan 4", DESCR: "Chassis fan module"
PID: NXA-FAN-30CFM-F     , VID: N/A , SN: N/A

NAME: "Power supply 1", DESCR: "AC power supply"
PID: N2200-PAC-400W      , VID: V04 , SN: DTN1817P5GC

NAME: "Power supply 2", DESCR: "AC power supply"
PID: N2200-PAC-400W      , VID: V04 , SN: DTN1817P5Q1
```

Show Interface

Show Interface displays detailed information about each interface. If you only issue the command [sh interface](#) (Nexus) (or [sh interfaces](#) for IOS) then you get information regarding all interfaces.

You can get information on a specific interface by using the Cisco syntax [sh interface ethernet 1/1](#). In this example we get the information for port 1. Depending on your switch you might have to use [ethernet](#) or [GigabitEthernet](#) etc.

```
Ethernet1/1 is up
Dedicated Interface
Hardware: 100/1000/10000/40000 Ethernet, address: 88f0.31ca.b0c8 (bia 88f0.31c
a.b0c8)
MTU 1500 bytes, BW 100000000 Kbit, DLY 10 usec
reliability 255/255, txload 1/255, rxload 1/255
Encapsulation ARPA
Port mode is access
full-duplex, 10 Gb/s, media type is 10G
Beacon is turned off
Input flow-control is off, output flow-control is off
Rate mode is dedicated
Switchport monitor is off
EtherType is 0x8100
Last link flapped 00:14:47
Last clearing of "show interface" counters never
5 interface resets
30 seconds input rate 24 bits/sec, 0 packets/sec
```

```
30 seconds output rate 296 bits/sec, 0 packets/sec
Load-Interval #2: 5 minute (300 seconds)
  input rate 192 bps, 0 pps; output rate 360 bps, 0 pps
RX
  0 unicast packets 115 multicast packets 34 broadcast packets
  149 input packets 22045 bytes
  0 jumbo packets 0 storm suppression bytes
  0 runts 0 giants 0 CRC 0 no buffer
  0 input error 0 short frame 0 overrun 0 underrun 0 ignored
  0 watchdog 0 bad etype drop 0 bad proto drop 0 if down drop
  0 input with dribble 0 input discard
  0 Rx pause
TX
  520 unicast packets 0 multicast packets 0 broadcast packets
  520 output packets 49544 bytes
  0 jumbo packets
  0 output errors 0 collision 0 deferred 0 late collision
  0 lost carrier 0 no carrier 0 babble 0 output discard
  0 Tx pause
```

From:
<https://wiki.alanwalker.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:
https://wiki.alanwalker.uk/doku.php?id=cisco_sfp_and_port_commands&rev=1575280078

Last update: 2023/03/09 22:35

