

Firmware Install

Jul 2026



Introduction

The firmware installation is pretty simple, but it's a manual process, unlike the RPi Pico where Thonny can do it for you. First we need to get the latest firmware file, you can get this from the link below.

https://micropython.org/download/WAVESHARE_RP2040_ZERO/

Note: this firmware is for the WaveShare (or compatible) RP 2040 device. I am using a Tenstar RP2040-Zero from AliExpress, and this firmware works with that.

NOTE You can use the Raspberry Pi Pico Firmware, but if you do things like the NeoPixel will not work.

Download the latest .UF2 file (at time of writing [WAVESHARE_RP2040_ZERO-20260406-v1.28.0.uf2](#))

From:

<https://wiki.alanwalker.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

https://wiki.alanwalker.uk/doku.php?id=firmware_install&rev=1784468456

Last update: **2026/07/19 13:40**

