

Raspberry Pi 3 Boot to USB

This is taken from the following URL: <https://www.raspberrypi.org/documentation/hardware/raspberrypi/bootmodes/msd.md>

I have documented it here as I use this guide a lot, and I don't want to lose it :)

This tutorial explains how to boot your Raspberry Pi 3 from a USB mass storage device such as a flash drive or USB hard disk. Be warned that this feature is experimental and may not work with all USB mass storage devices.
<color red>USB Hard Drives seem particularly fussy.</color>

Program USB Boot Mode

Before a Pi will network boot, it needs to be booted with a config option to enable USB boot mode. Enabling this config option requires special **start.elf** and **bootcode.bin** files. These can be installed by using the "next" branch on **rpi-update**.

Go to the [Downloads](#) page and install Raspbian onto an SD card using Win32DiskImager if you are on Windows, or dd if you are on Linux/Mac. Boot the Pi.

```
sudo mkdir /mnt/target sudo mount /dev/sda2 /mnt/target/ sudo mkdir /mnt/target/boot sudo mount /dev/sda1 /mnt/target/boot/ sudo apt-get update; sudo apt-get install rsync sudo rsync -ax --progress / /boot /mnt/target
```

```
cd /mnt/target sudo mount -bind /dev dev sudo mount -bind /sys sys sudo mount -bind /proc proc sudo chroot /mnt/target rm /etc/ssh/ssh_host* dpkg-reconfigure openssh-server exit sudo umount dev sudo umount sys sudo umount proc
```

```
sudo sed -i "s,root=/dev/mmcblk0p2,root=/dev/sda2," /mnt/target/boot/cmdline.txt sudo sed -i "s,/dev/mmcblk0p,/dev/sda," /mnt/target/etc/fstab
```

```
cd ~ sudo umount /mnt/target/boot sudo umount /mnt/target # sudo poweroff
```

From:

<https://wiki.alanwalker.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

https://wiki.alanwalker.uk/doku.php?id=raspberry_pi_3_boot_to_usb&rev=1481732770

Last update: 2023/03/09 22:35

