

# Setting up the Slave UMDs



This page is work in progress and is incomplete

## Slave Raspberry Pi(s)

The slave Raspberry Pi(s) download the latest 'my\_data.txt' from the Master Raspberry Pi (once a second) using a 'wget' command, this means that each slave knows what to display. The my\_data.txt file is downloaded every second, so changes to the file via the web interface propagate through the UMDs very quickly.

The 'my\_data.txt' file has 8 lines, each line is for a particular display, so for example, line 1 & 2 are for LCD1 and reference monitors 1 and 2. Lines 5 & 6 are for LCD and reference monitors 5 & 6.

The setup of the slave UMDs is very simple compared to the Master. Setup Raspbian, copy some files and away you go.

---

## Set Static IP Address

To set a static IP address, we need to login to the RPi via SSH and change the following file:

The default login is **username: pi** and **password: raspberry** (if this is an existing unit that is misbehaving, the login will be **pi** and **EricssOn**)

```
/etc/dhcpd.conf
```

Enter the following

```
sudo nano /etc/dhcpd.conf
Add these lines to the end of the file (default is dhcp) using your own IP Address details
eth0
    static ip_address=192.168.1.11/24
    static routers=192.168.1.1
    static domain_name_servers=192.168.1.4
```

Use Ctrl-X to exit and Y to save, now reboot the pi and connect to the new address

---


## Raspi Config

From the terminal, run:

```
sudo raspi-config
```

You will see the following menu, there are several items we want to change here.

```
|_____| Raspberry Pi Software Configuration Tool (raspi-config)
```

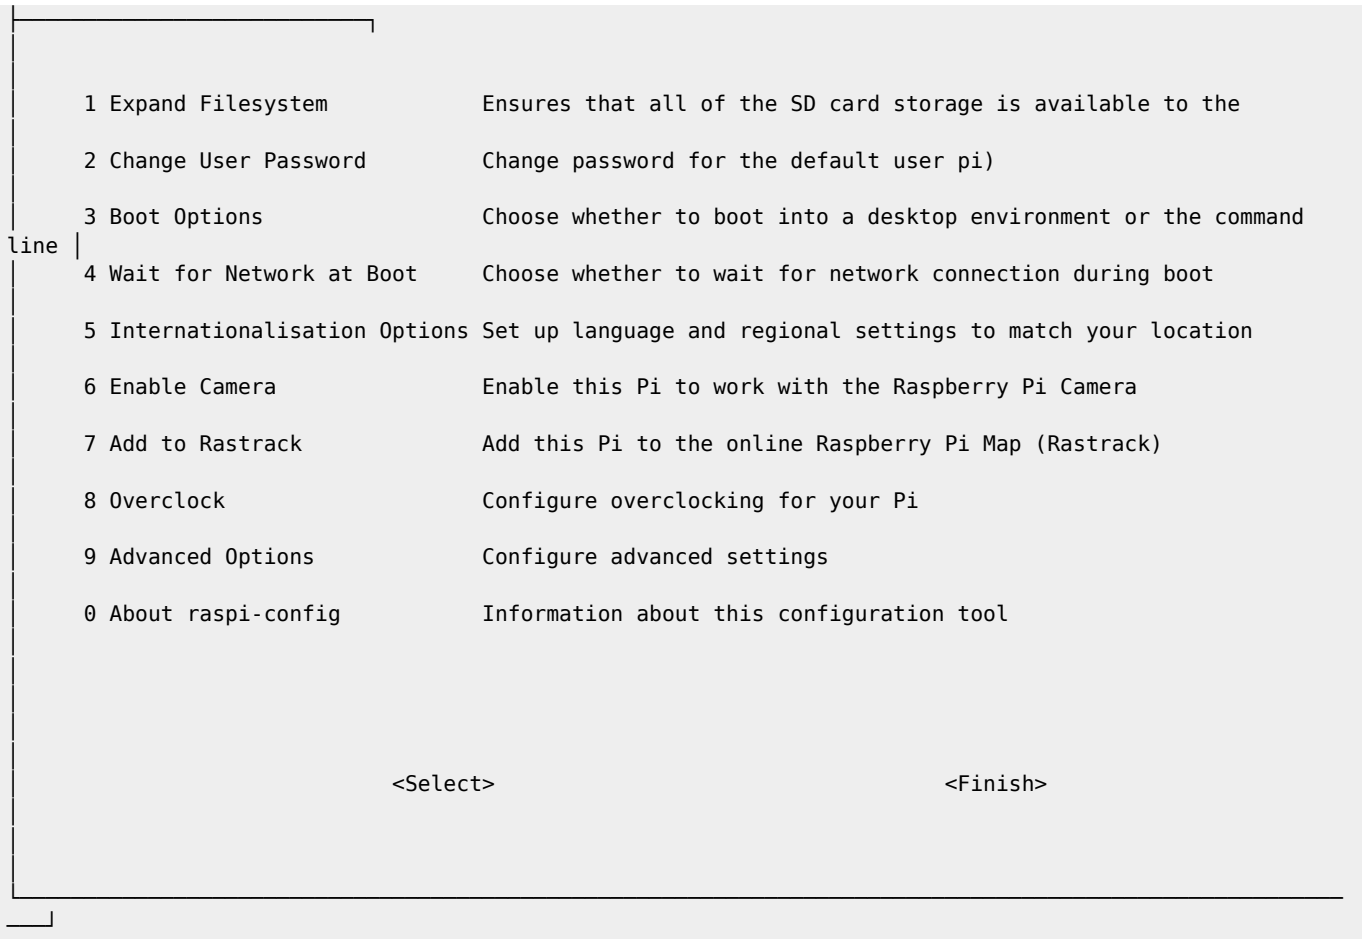

Select Option 2 (Change User Password) - Change the password to **Ericss0n**

Select Option 3 (Boot Options) - Change to **B2 Console Autologin Text console, automatically logged in as 'pi' user**

Select Option 9 (Advanced) then A2 (HostName) - Change the Hostname to **UMD00n** (where n is the display number)

Select **Finish** when asked to reboot select **Yes**

---

## Update RPI

Even if you downloaded the latest version of Raspbian, chances are there are some updates. To update the RPi use the following command line:

```
sudo apt-get update && sudo apt-get upgrade -y
```

This will most likely take a few minutes on a new install.

---

## Create Folder, Copy Files, Set Permissions

To hold the UMD LCD files, create a folder in your home location called Python and give the following rights:

```
mkdir /home/pi/Python
sudo chmown www-data /home/pi/Python
sudo chmod 777 /home/pi/Python
```

We need to copy the files to the /home/pi/Python location, for the Slave there are four files:

- launchUMD.sh - A script to auto start the UMD at boot

- getData - This is the script that gets the updated my\_data.txt file
- my\_data.txt - This holds the LCD data text, and downloaded from the Master via wget commands
- UMDisplay02.py - The Python code that runs the LCD

These files need to be copied to the /home/pi/Python location

```
sudo chmod 777 /home/pi/Python/*
```

---

## Edit getData File

The getData file contains the wget command that pulls the latest version of my\_data.txt from the Master Pi. The my\_data.txt contains the 8 lines of text for the four LCD displays (2 lines for each LCD).

Example my\_data.txt

```
UPPER MONITOR (1) - H264 SD
LOWER MONITOR (2) - H264 HD
UPPER MONITOR (3) - HEVC SD
LOWER MONITOR (4) - HEVC HD
UPPER MONITOR (5) - UHD TV
LOWER MONITOR (6) - HDR UHD TV
UPPER MONITOR (7) - Sky Cinema HD
LOWER MONITOR (8) - Sky Sports UHD
```

Example getData

```
sudo wget -q http://192.168.1.11/my_data.txt >null -O my_data.txt
```

In the getData file we need to replace the IP Address with the IP Address of our Master UMD Pi.

To change the IP Address use:

```
sudo nano /home/pi/Python/getData
```

You could use HostNames, but I have found hostnames on Pi's pretty unreliable.

---

## Edit launchUMD File

The launchUMD file contains a link to the UMDisplay0x.py file

```
#!/bin/sh
# launchUMD.sh
# navigate to home directory, then to this directory then launch script

cd /
cd home/pi/Python
sudo python UMDisplay01.py &
cd /
```

This file needs to be edited so that the line `sudo python UMDisplay1.py &` points to the correct UMD Device (so if this is your third UMD Device it needs to contain UMDisplay03)

```
sudo nano launchUMD.sh
```

## Edit UMDisplay0x File

The UMDisplay0x file contains the code to write to the LCD. We do have to edit this file to tell it which of the two LCD lines to display from the my\_data.txt file

```
# write line 1 and 2 to the LCD
lcd_string(" " + line1,LCD_LINE_1)
lcd_string(" " + line2,LCD_LINE_2)
```

**Line1** refers to the line in the **my\_data.txt** file. So if this was UMD3, then you would want lines 5 and 6. so this would be:

```
lcd_string(" " + line5,LCD_LINE_1)
lcd_string(" " + line6,LCD_LINE_2)
```

**LCD\_LINE\_1** refers to the Line on the LCD (Line 1 is the top, line 2 is the bottom)

---

From:

<https://wiki.alanwalker.uk/> - WalkerWiki - [wiki.alanwalker.uk](https://wiki.alanwalker.uk/)

Permanent link:

[https://wiki.alanwalker.uk/doku.php?id=setting\\_up\\_the\\_slave\\_umds&rev=1482342403](https://wiki.alanwalker.uk/doku.php?id=setting_up_the_slave_umds&rev=1482342403)

Last update: **2023/03/09 22:35**

