


Using the Pico RUN Pin

Jul 2026



Introduction

The Raspberry Pi Pico has a RUN pin, see below.

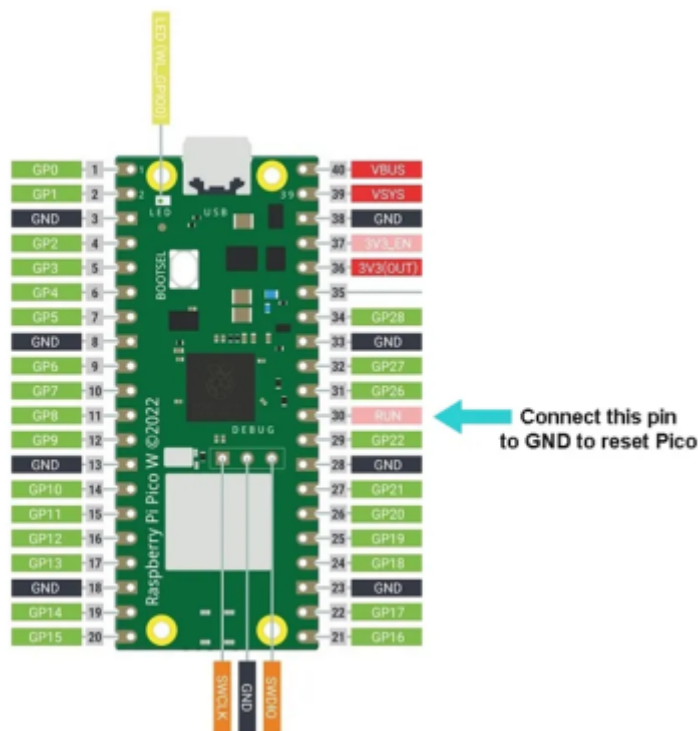

Connecting this Pin to GND starts (or if it is already running restarts) the Raspberry Pi Pico.

From:

<https://wiki.alanwalker.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

https://wiki.alanwalker.uk/doku.php?id=using_the_pico_run_button&rev=1784196160

Last update: 2026/07/16 10:02

