


Using the Pico RUN Pin

Jul 2026




Introduction

The Raspberry Pi Pico has a RUN pin, see below.

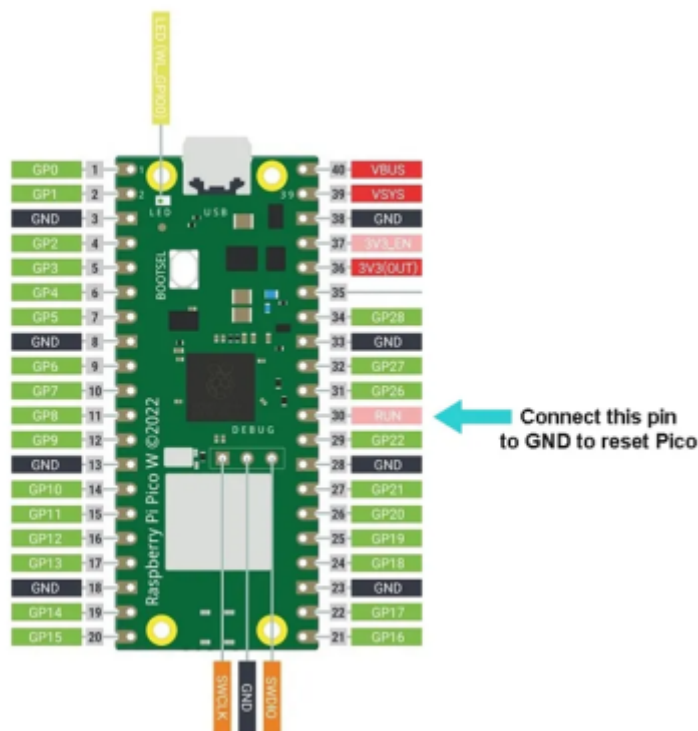

Connecting this Pin to GND starts (or if it is already running restarts) the Raspberry Pi Pico. For this example I am going connect a button from the RUN pin (30) to the GND Pin (28).

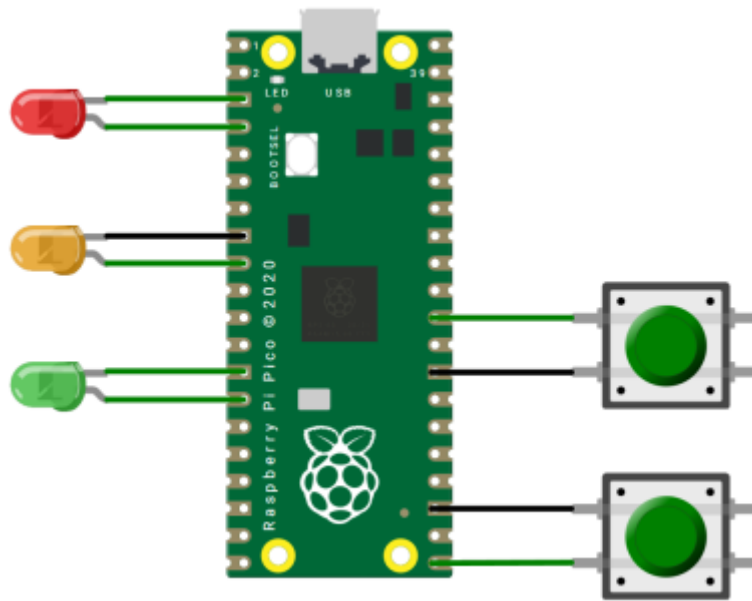

The code I am going to use

From:
<https://wiki.alanwalker.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:
https://wiki.alanwalker.uk/doku.php?id=using_the_pico_run_button&rev=1784196259

Last update: **2026/07/16 10:04**

