


Setting up the Master UMD

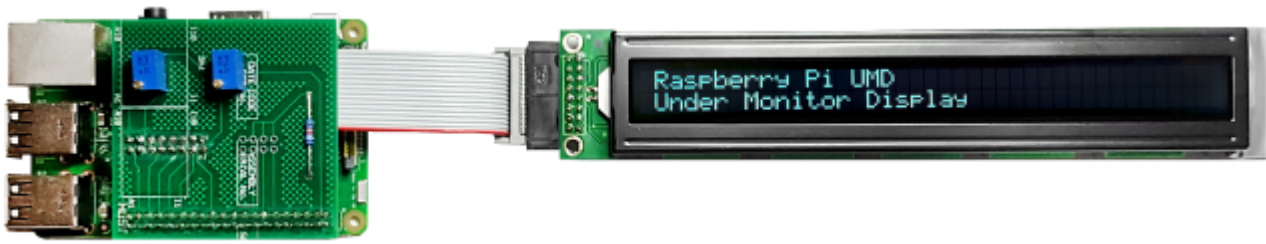

Master Raspberry Pi

The primary Raspberry Pi does a little more than the others. As well as writing to the LCD display, this unit has a web server (Apache) and PHP running. The web server hosts a text file (my_data.txt) that is hosted and is editable via a web interface and PHP. For this to work we need the following installed and configured

Set Static IP Address

To set a static IP address, we need to login to the RPi via SSH and change the following file:

The default login is **username: pi and password: raspberry** (if this is an existing unit that is misbehaving, the login will be **pi and Ericss0n**)

```
/etc/dhcpd.conf
```

Enter the following

```
sudo nano /etc/dhcpd.conf
Add these lines to the end of the file (default is dhcp) using your own IP Address details
eth0
static ip_address=192.168.1.11/24
static routers=192.168.1.1
static domain_name_servers=192.168.1.4
```

Use Ctrl-X to exit and Y to save, now reboot the pi and connect to the new address

Raspi Config

From the terminal, run:

```
sudo raspi-config
```

You will see the following menu, there are several items we want to change here.

```
Raspberry Pi Software Configuration Tool (raspi-config)

1 Expand Filesystem          Ensures that all of the SD card storage is available to the
2 Change User Password        Change password for the default user pi)
```

line	3 Boot Options	Choose whether to boot into a desktop environment or the command
	4 Wait for Network at Boot	Choose whether to wait for network connection during boot
	5 Internationalisation Options	Set up language and regional settings to match your location
	6 Enable Camera	Enable this Pi to work with the Raspberry Pi Camera
	7 Add to Rastrack	Add this Pi to the online Raspberry Pi Map (Rastrack)
	8 Overclock	Configure overclocking for your Pi
	9 Advanced Options	Configure advanced settings
	0 About raspi-config	Information about this configuration tool
	<Select> <Finish>	

Select Option 2 (Change User Password) - Change the password to **Ericss0n**

Select Option 3 (Boot Options) - Change to **B2 Console Autologin Text console, automatically logged in as 'pi' user**

Select Option 9 (Advanced) then A2 (HostName) - Change the Hostname to **UMD00n** (where n is the display number)

Select **Finish** when asked to reboot select **Yes**

Update RPI

Even if you downloaded the latest version of Raspbian, chances are there are some updates. To update the RPi use the following command line:

```
sudo apt-get update && sudo apt-get upgrade -y
```

This will most likely take a few minutes on a new install.

Install PHP

We need to install PHP so that the web interface will function. To install PHP use the following command line:

```
sudo apt-get install php5
```

There is no PHP7 for RPi yet, but version 5 will be fine.

Install Apache Webserver

Apache is the Web Server that will host our website.

```
sudo apt-get install apache2
```

This may already exist, if so this will also update it.

Configure Apache Webserver

We have to configure Apache Webserver, mainly so that Apache knows where our site is located. There are two files we need to edit, and they are:

- /etc/apache2/apache2.conf
- /etc/apache2/sites-enabled/000-default.conf

Before we begin this process, create a folder in your home location called Python and give Apache rights:

```
mkdir /home/pi/Python
sudo chown www-data /home/pi/Python
sudo chmod 777 /home/pi/Python
```

We need to copy the website to the /home/pi/Python location, for the Mater there are five files:

- bootstrap.min.css - This is a style sheet that controls the look of the site
- index.php - The main site for entering text (this is what Apache will host)
- launchUMD.sh - A script to auto start the UMD at boot
- my_data.txt - This holds the LCD data text, and is edited by the index.php
- UMDisplay01.py - The Python code that runs the LCD

These files need to be copied to the /home/pi/Python location

`sudo chmod 777 /home/pi/Python/my_data.txt` or Apache might have trouble writing to it.

`sudo chmod 777 launchUMD.sh`

`sudo chmod 777 UMDisplay01.py`

Apache2.conf

Open and edit the /etc/apache2/apache2.conf file and add these lines:

```
<Directory /home/pi/Python>
    Options Indexes FollowSymLinks
    AllowOverride All
    Require all granted
</Directory>
```

Save the file and exit.

000-default.conf

Open /etc/apache2/sites-enabled/000-default.conf, locate the following lines and edit as follows

```
ServerAdmin webmaster@localhost
DocumentRoot /home/pi/Python
DirectoryIndex index.php
```

Now reboot the RPi

```
sudo reboot
```

Edit index.php

We need to change one line in the index.php, this is the IP Address. This address is the current IP your eth0 has (or the website will not format correctly).

```
sudo nano /home/pi/Python/index.php
look for these lines
<link rel="stylesheet" type="text/css"
      href="http://ipaddress/bootstrap.min.css">
<meta name="viewport" content="width=device-width, initial-scale=1">
Add your master PI IP address where is states ipaddress
```

Save and close this file.

Give Execute Permissions

There are two files that will be executed by the Pi, these are:

- launchUMD.sh - Autorun at boot, this file launches the UMDisplay01.py
- UMDisplay01.py - Runs the LCD

To make these files executable run the following from the command line:

```
sudo chmod 777 /home/pi/Python/launchUMD.sh
sudo chmod 777 /home/pi/Python/UMDisplay01.py
```

We should be in a position to test the Pi out now.

Test Web Server

To test the webserver, navigate to your RPi from another computer on the same network, you should see your webpage.

<http://youripaddress/index.php>

Ericsson UMD Text Editor

```
UPPER MONITOR (1) - H264 SD  
LOWER MONITOR (2) - H264 HD  
UPPER MONITOR (3) - HEVC SD  
LOWER MONITOR (4) - HEVC HD  
UPPER MONITOR (5) - UHD TV  
LOWER MONITOR (6) - HDR UHD TV  
Raspberry Pi UMD  
Under Monitor Display
```

Update

If all is well, you should see a website that looks a bit like the one above. Remember that the text comes from the file `/home/pi/Python/my_data.txt` so you can check that file if you are unsure.

Test LCD Code


Assuming that you have connected the LCD to the RPi (via the ribbon cable and driver board) then you can test the code that runs the LCD, on the master this file is the:

```
UMDisplay01.py
```

This is a python script, you can run this script by entering at the command line:

```
./UMDisplay01.py
```

If you are lucky, you will see some text on the LCD, chances are however you will not. This is due to the Potentiometer settings on the driver board, you will need to change these to set the Backlight and LCD intensity.

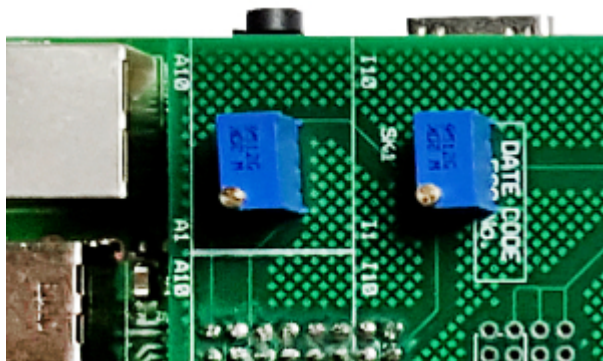

Adjusting these two potentiometers will allow you to balance the text and backlight intensity to get the brightness level you require.

Making it Automatic

The last part is to automate the process of starting the UMD code. For this we need to add the launcher file to a system file on the RPi.

Edit the file `/etc/rc.local` to automate this process.

```
sudo nano /etc/rc.local
add this line at the end:
sudo ./home/pi/Python/launchUMD.sh
```

To test this, reboot and the LCD should start up automatically (the LCD won't clear on boot, but wait for the "Waiting for 5 Seconds for Network Start" message).

From:

<https://wiki.alanwalker.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

https://wiki.alanwalker.uk/doku.php?id=setting_up_the_master_umd

Last update: **2023/03/09 22:35**

